

CTUNIPAR01:

It is set to work with phone buttons, but it is possible to programme it, also for cars which do not have these buttons.

(in this case you will use the audio control buttons)

SOFTWARE PROGRAMMING PROCEDURE

- 1 - Open the unit
- 2 - Press the button near the wire connector till the red led turns on and stays still
- 3 - Release the button
- 4 - Press & release the button several times till you reach the number of flashings needed.

If your car doesn't have **ANY** phone button, the red led should flash
once every 10 seconds.

If your car has **ONE** phone button, the red led should flash
4 times every 10 seconds

If your car has **TWO** phone buttons, the red led should flash
3 times every 10 seconds

- 5 - Confirm the software programming procedure by pressing the button until the red led turns on again and stays still, now release the button, disconnect and reconnect the 16-pin connector of CTUNIPAR01.

**THE PROGRAMMING PROCEDURE SHOULD BE DONE
WITH THE UNIT CONNECTED**

WARNING:

Please, follow the above explained procedure only if your car doesn't have any phone button, or for all those cars which are not mentioned on this user guide.

ALTERNATIVELY:

Some car models may have either 1 or 2 phone buttons, for ex. some Volkswagen models have 2 phone buttons instead of 1, with these cars CTUNIPAR01 is set to work by default with one phone button; in this case please change the unit setting as described above.

SOFTWARE SETTING

Before installing the CUNIPAR01 interface, you need to set it up according to your car make in order to choose the dedicated software.

Shift the switches with care using a small screwdriver.







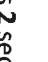



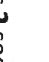







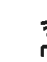
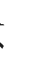



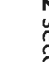






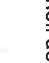

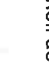















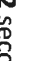


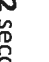

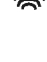




CTUNIPAR01 IS SET BY DEFAULT FOR MERCEDES CARS, YOU WOULD NEED TO SHIFT THE SWITCHES ONLY IF YOU OWN ANOTHER CAR MAKE.

AUDI 1 2 3 4 5 6 7 8 6	ALFA ROMEO/FIAT 1 2 3 4 5 6 7 8 6 8	B.M.W 1 2 3 4 5 6 7 8 7
B.M.W (can bus mute) 1 2 3 4 5 6 7 8 6 7 8	MERCEDES 1 2 3 4 5 6 7 8	MERCEDES ML/R/GL 1 2 3 4 5 6 7 8 6 7
OPEL 1 2 3 4 5 6 7 8 8	PEUGEOT /CITROEN 1 2 3 4 5 6 7 8 5 7	PORSCHE 1 2 3 4 5 6 7 8 5 8
RENAULT 1 2 3 4 5 6 7 8 5	VW-SEAT-SKODA 1 2 3 4 5 6 7 8 7 8	CHRYSLER 1 2 3 4 5 6 7 8 5 6
Choosing the CAR KIT model		
CK3000 EVOLUTION 1 2 3 4 5 6 7 8	MK6000/MK9000 3 4 5 6 7 8 ■ ■	MK6100 2 3 4 5 6 7 8 ■

CONNECTS2

Tel 0906 736 2430

technical@connects2.com www.connects2.com

FUNCTIONS	SINGLE PHONE KEY	DOUBLE PHONE KEY	B.M.W with FACE BUTTON	AUDI	CARS WITHOUT PHONE BUTTONS
ANSWERING	Press 	Press 	Press 	Press 	Press VOLUME +
HANGING UP	Press 2 seconds 	Press 	Press 2 seconds 	Press 2 seconds 	Press VOLUME —
REJECTING A CALL	Press 2 seconds 	Press 	Press 2 seconds 	Press 2 seconds 	Press VOLUME —
VOICE DIALING	Press 	Press 	Press 	Press 	Press VOLUME + and then VOLUME —
LAST NUMBER REDIALLING	Press 2 seconds 	Press 2 seconds 	Press 2 seconds 	Press 2 seconds 	Press VOLUME + (shortly) and then VOLUME — (till redialling)
DISCRETE MODE	Press 	Press 	Press 	Press 	Press VOLUME +
BACK TO CAR KIT	Press 	Press 	Press 	Press 	Press VOLUME + and then VOLUME —
ADJUSTING THE VOLUME	Press VOLUME + to increase it Press VOLUME — to reduce it	Press VOLUME + to increase it Press VOLUME — to reduce it	Press VOLUME + to increase it Press VOLUME — to reduce it	Roll up  to increase it Roll down  to reduce it	Press VOLUME + and then VOLUME — to increase it Press VOLUME — and then VOLUME — to reduce it
ENTERING THE MENU	Press SEEK + and then SEEK — TWICE Press SEEK + SEEK — SEEK + SEEK —	Press SEEK + and then SEEK — TWICE Press SEEK + SEEK — SEEK + SEEK —	Press SEEK + and then SEEK — TWICE Press SEEK + SEEK — SEEK + SEEK —	Roll  and then  TWICE  	Press SEEK + and then SEEK — TWICE SEEK + SEEK — SEEK + SEEK —
SCROLL UP THE MENU	Press VOLUME +	Press VOLUME +	Press VOLUME +	Roll up 	Press VOLUME + and then VOLUME —
SCROLL DOWN THE MENU	Press VOLUME —	Press VOLUME —	Press VOLUME —	Roll down 	Press VOLUME — and then VOLUME +
CONFIRMING A FUNCTION	Press 	Press 	Press 	Press 	Press VOLUME +
CANCELLING A FUNCTION	Press 2 seconds 	Press 	Press 2 seconds 	Press 2 seconds 	Press VOLUME —
AUDIOSTREAMING ON	Press twice 	Press twice 	Press twice 	Press twice 	NOT AVAILABLE
PLAY / PAUSE	Press 	Press 	Press 	Press 	NOT AVAILABLE
CHANGE SONG	Press SEEK + or SEEK —	Press SEEK + or SEEK —	Press SEEK + or SEEK —	Roll  or 	NOT AVAILABLE
AUDIOSTREAMING OFF	Press 2 seconds 	Press 2 seconds 	Press 2 seconds 	Press 2 seconds 	NOT AVAILABLE