

Note:

Only for BMW without switch panel under climate control unit:


Attach blanking cover to facia plate (see arrow)



Installation Manual Double DIN Kit

381023-07-1


- BMW 1 (E87) 03/2007-> (facelift)
 - with manual air condition
 - without iDrive

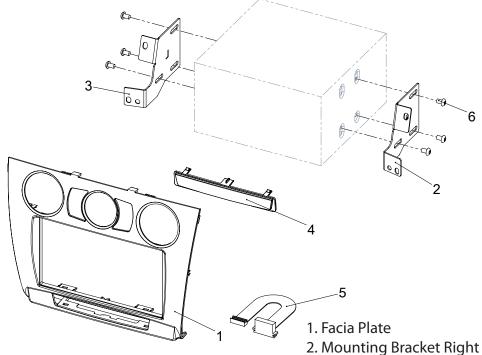

- 3. Mounting Bracket Left
- 4. Blanking Cover*
- * only required for models without switch panel under climate control
- 5. Ribbon Cable



1. BMW 1 (E87) 03/2007 (facelift) with switch bar under the climate control unit

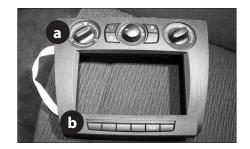

15. Attach air condition control unit(a) and switch bar (b) toreplacement facia plate




BMW <u>without switch panel</u> under climate control unit (see left)

- skip steps 11 14
- see note on page 8



2. Unclip middle panel and remove it carefully

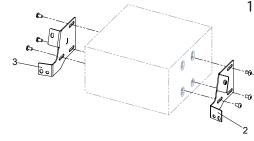

16. Attach mounting brackets to double DIN navigation

Connect all required circuit points

Fix double DIN navigation into dash board



3. Unclip air condition control unit



17. Push facia plate over Double DIN navigation - until it snaps in

Reinstall everything in reverse order to finish installation




4. Pull out air condition control unit carefully

Remove pulgs (see arrows)




11. Remove 5 screws from switch panel (see arrows)

Take out PCB

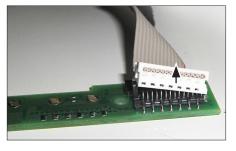


12. Remove plug attached to ribbon cable from PCB

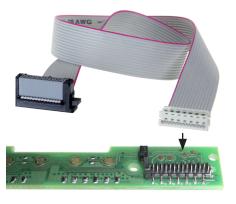


13. Attach white plug of replacement ribbon cable to PCB

Reinstall PCB to switch panel

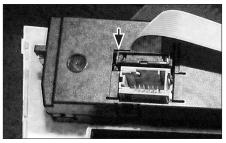

14. Attach black plug of replacement ribbon cable to air condition control unit

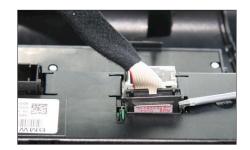

5. Remove plug attached to ribbon cable



6 Unclip and remove switch panel below air condition control unit



7. Unclip and remove air condition control unit



3. Remove screws below OEM head unit (see arrows)













9. Remove out OEM head unit

10. Cut away plastic to clear space for Double DIN head unit (see sample images)