

### DIP SWITCH SETTINGS


Item No.	Model Years	1	2	3	4	5	6
CPI-AD-A1	2013-2018 A1	OFF ▲	OFF ▲	ON ▼	ON ▼	OFF ▲	OFF ▲
DIP	ON ▼	OFF ▲					
7	Car without "PARK" button	Car with "PARK" button					
8	Add-on MIC	Original MIC					







**NOTE!** Please try another car model DIP settings if your current car model DIP doesn't work. Disconnect and reconnect interface's power for effective after changing any DIP setting.

### SWITCH:



Press and hold "MEDIA" button for 3s

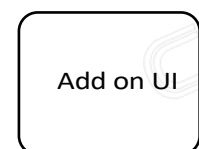

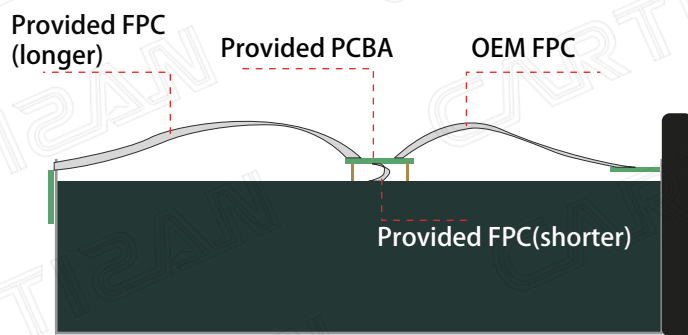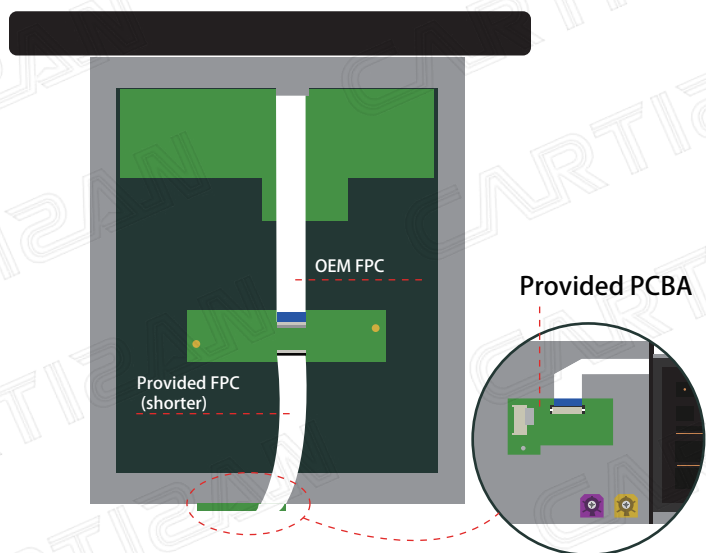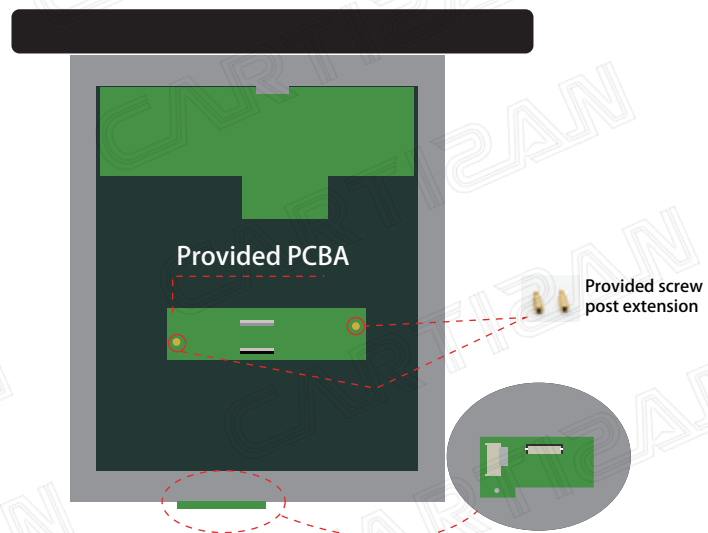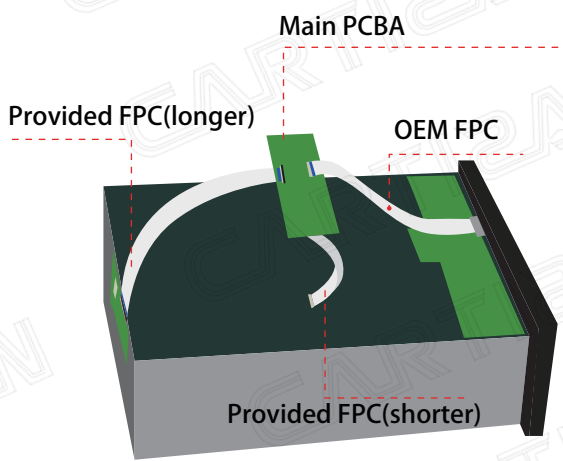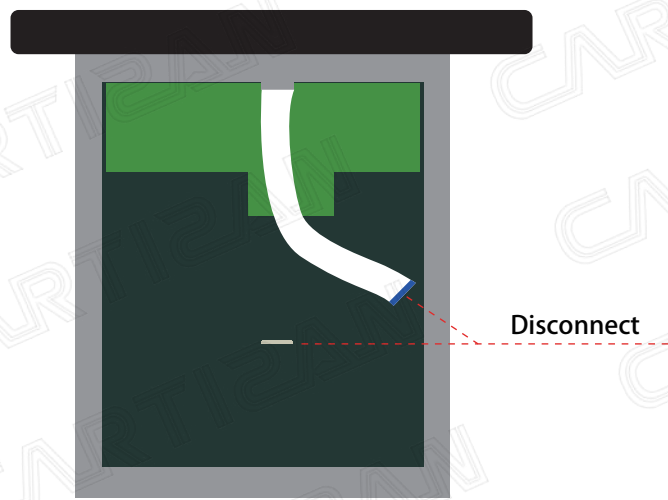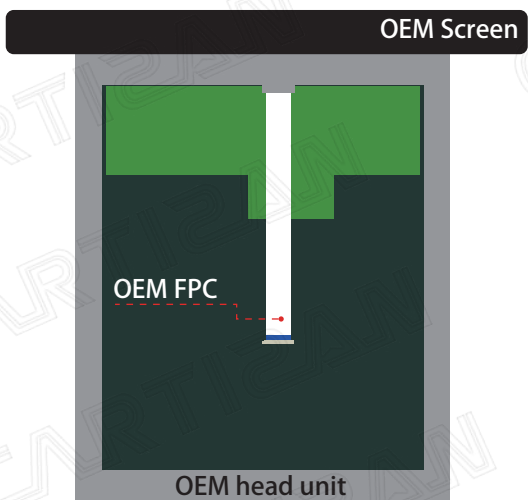

## ■ OEM RADIO AUDIO SETTINGS:

1. For car models with stock AUX port, make sure source switch to "AUX" mode on original car stereo for audio transmission before using the integration.
2. For car models with an AMI port, please plug in "AMI to AUX cable (sold separately)" then switch audio source to AMI mode.
3. For car models without AUX or AMI port (e.g. BMW EVO, Mercedes NTG 5, etc.), please plug in the provided "AUX-USB" adapter then switch audio source to "AUX-USB" mode.

## ■ QUICK RESTART TIPS:

Press and hold the "BACK" button for 10s will restart the integration immediately

## ■ WHAT'S IN THE BOX



USB/Video cable



LVDS cable



WiFi/BT antenna



PCBA&FPC



Power/CAN harness