



# NISSAN PULSAR 2015


## USB and Jack 3,5mm replacement PCB

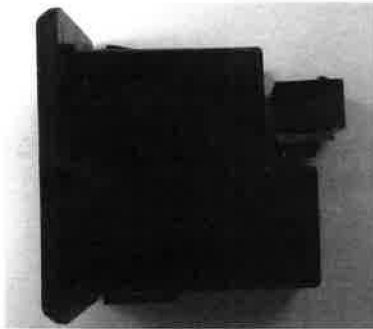


This is the final result. Plug the connector of the harness and do all connections on radio side. Insert the USB and Jack 3,5mm replacement panel into the hole left the OEM part.

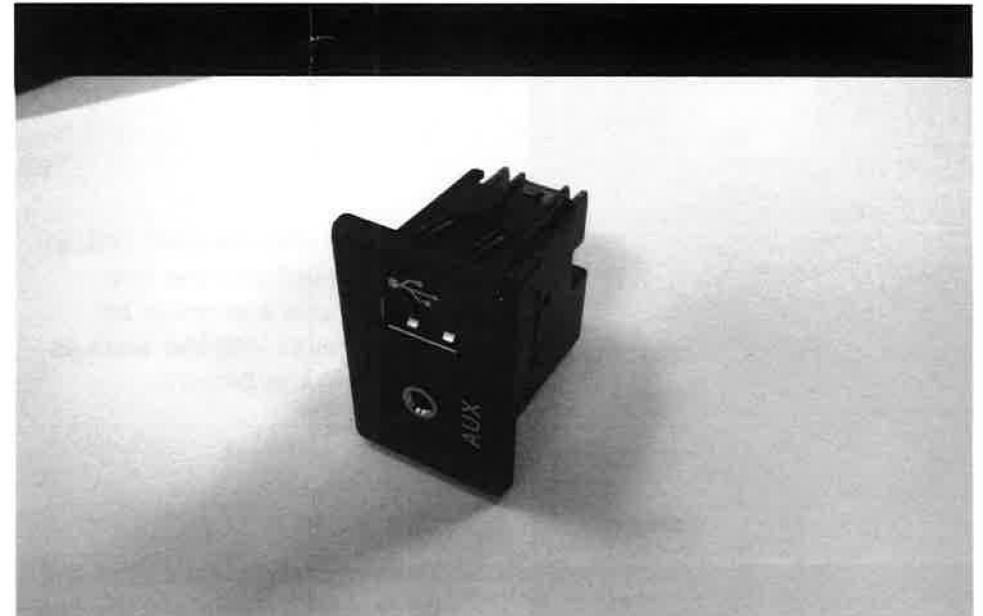

# Installation Manual

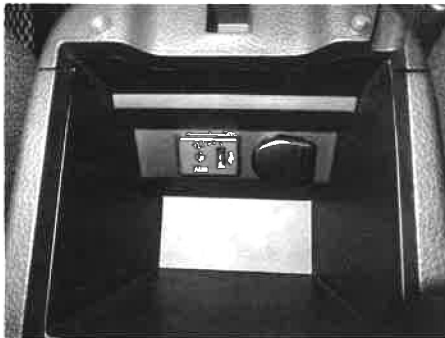


Open the armrest and locate the OEM USB and Jack 3,5 mm replacement PCB.

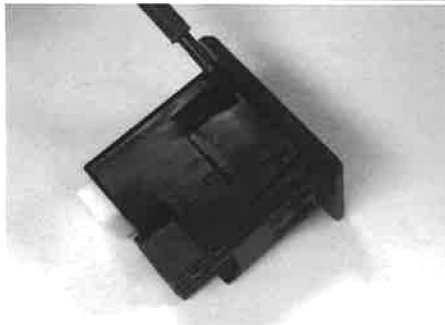


Take the original part and, in order to unhook the rear plastic, use a screwdriver by lightly lever into the slots as shown in the picture.




The removed plastic part will be required. Slide out the top and bottom original PCBs.

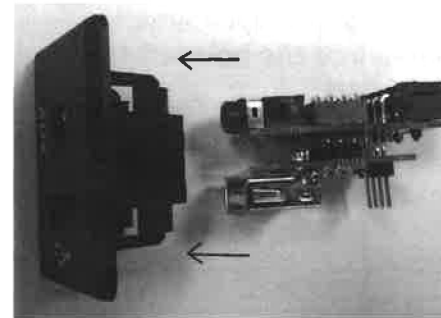

Take the new PCB and slide it into the original housing.

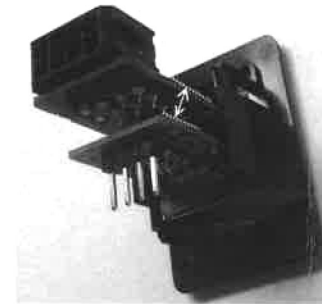

During this operation, adjust the distance between the two PCB, in order to facilitate the insertion of the part and fit the sockets to the holes.

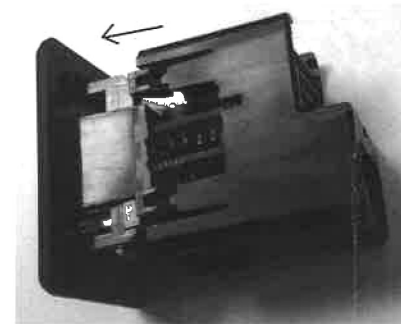

Take the rear plastic saved before and close it with the front plastic. You may need to exert some force to fit the black connector on the right position.

All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.